

FALCON / -XL


User's Guide for software version 7.2 and higher
(refer to tracking label on product)

OPENING SENSOR FOR AUTOMATIC INDUSTRIAL DOORS

FALCON: for normal to high mounting (3.5 - 7 m)

FALCON XL: for low mounting (2 - 3.5 m)

DESCRIPTION

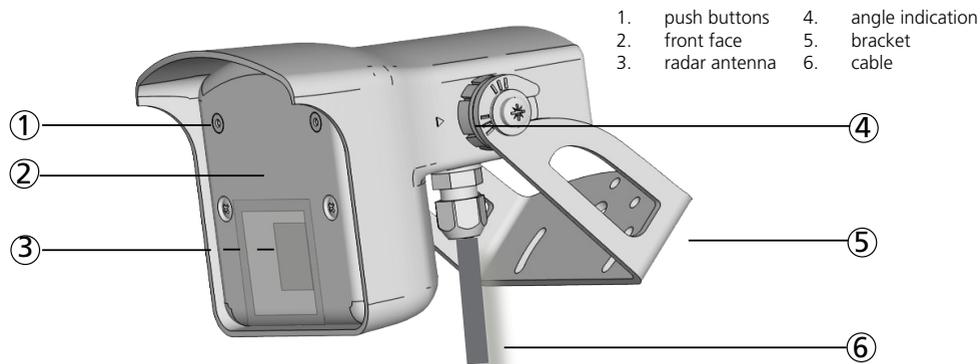

TECHNICAL SPECIFICATIONS


Technology:	microwave doppler radar
Transmitter frequency:	24.150 GHz
Transmitter radiated power:	< 20 dBm EIRP
Transmitter power density:	< 5 mW/cm ²
Detection mode:	motion
Detection zone:	FALCON: 4 x 5 m ; FALCON XL: 4 x 2 m (typical at 30° and field size 9)
Min. detection speed:	5 cm/s*
Supply voltage**:	12 V to 24 V AC ±10 % (50 - 60 Hz); 12 V to 24 V DC +30 % / -10%
Max power consumption:	< 2 W
Output**:	relay (free of potential change-over contact)
Max. contact voltage:	30V AC/42V DC
Max. contact current:	1A (resistive)
Max. switching power:	30 W
LED-signal:	red: detection state, parameter indication; green: value indication
Mounting height:	FALCON: 3.5 m - 7m; FALCON XL: 2 m - 3.5 m
Degree of protection:	IP65 (IEC/EN 60529)
Temperature range:	from -30 °C to + 60 °C
Dimensions:	127 mm (L) x 102 mm (H) x 96 mm (W)
Tilt angles:	0° to 180° vertical
Materials:	ABS and polycarbonate
Weight:	400 g
Cable length:	10 or 15 m

Specifications are subject to changes without prior notice.

* Measured in optimal conditions

** External electrical sources must be within specified voltages, max 100W and ensure double insulation from primary voltages.


1 MOUNTING & WIRING

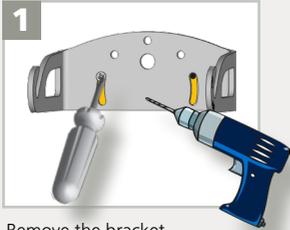

Remove the bracket from the sensor. Drill 2 holes accordingly. Fix the bracket firmly.




Position the sensor on the bracket and fasten the screws firmly.

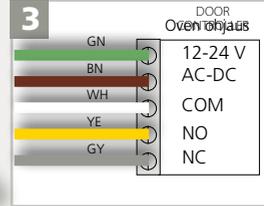


Connect the wires to the door controller. Choose between NO and NC contact.

Mount the sensor securely.

2 DETECTION FIELD ADJUSTMENTS

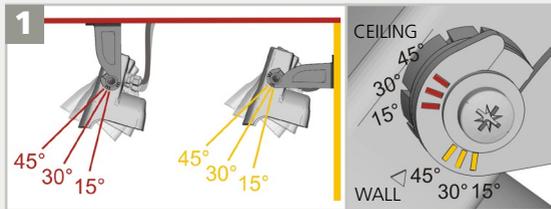


Adjust the angle of the sensor to position the detection field.

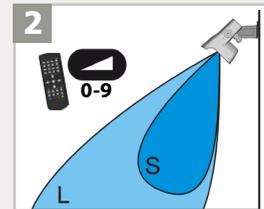

Adjust the field size with the remote control or the push buttons.


FALCON

Mounting height: 5 m

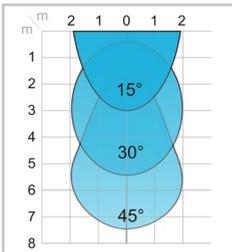


FALCON

Mounting height: 3.5 m

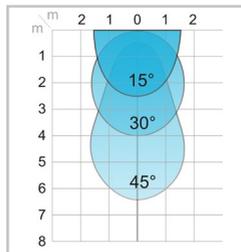

FALCON XL

Mounting height: 2.5 m

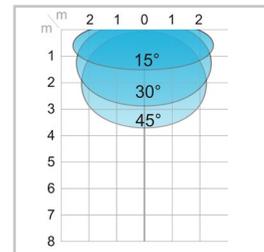

All detection field dimensions were measured in optimal conditions and with field size value 9.

3 DETECTION FILTER (REJECTION MODE)

Choose the right detection filter for your application with the remote control or the push buttons:



Detection of all targets

(pedestrians and parallel traffic are detected)

- 1 = no specific filter
- 2 = filter against disturbances (recommended in case of vibrations, rain etc.)

Detection only of vehicles moving towards the sensor*

(pedestrians and parallel traffic are not detected + disturbances are filtered)

Value recommendations according to angle and height:

	7 m - 3.5 m	2.5 m
15°	3	3
30°	4	4
45°	5	4
+45°	6	5
		XL

Always check if the chosen value is optimal for the application. The object size and nature can influence the detection.

MOUNTING TIPS



Avoid vibrations.



Do not cover the sensor.



Avoid proximity to neon lamps or moving objects.




Only open the sensor when the cable needs to be replaced.




- The sensor cannot be used for purposes other than its intended use.
- The manufacturer of the door system incorporating the sensor is responsible for compliance of the system to applicable national and international regulations and safety standards.
- The installer must read, understand and follow the instructions given in this manual. Improper installation can result in improper sensor operation.
- The manufacturer of the sensor cannot be held responsible for injury or damage resulting from incorrect use, installation or inappropriate adjustment of the sensor.


DIMENSIONS (in mm)

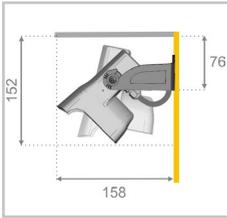

Wall mounting

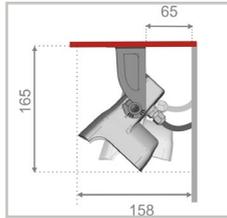

Ceiling mounting

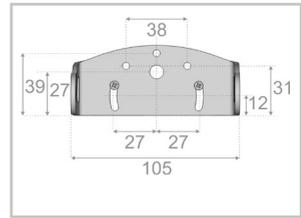

Bracket dimensions

POSSIBLE SETTINGS BY REMOTE CONTROL



	0	1	2	3	4	5	6	7	8	9
FIELD SIZE	XXS	XS	S	>	>	>	>	L	XL	XXL
HOLD-OPEN TIME	0.5 s	1 s	2 s	3 s	4 s	5 s	6 s	7 s	8 s	9 s
OUTPUT CONFIGURATION		A	P							
DETECTION MODE		bi	uni	uni AWAY						
DETECTION FILTER		1	2	3	4	5	6			

A = active output (relay active when detection)
P = passive output (relay active when no detection)

bi = two-way detection
uni = one-way detection towards sensor
uni AWAY = one-way detection away from sensor

FACTORY VALUES

RESETTING TO FACTORY VALUES:

POSSIBLE SETTINGS BY PUSH BUTTONS



TO START OR END AN ADJUSTMENT SESSION, press and hold **either** push button until the LED flashes or stops flashing.



TO SCROLL THROUGH THE PARAMETERS, press the **right** push button.



TO CHANGE THE VALUE OF THE CHOSEN PARAMETER, press the **left** push button.

	Parameter n°	Value (factory values)
1	FIELD SIZE	(7)
2	HOLD-OPEN TIME	(0)
3	OUTPUT CONFIGURATION	(1)
4	DETECTION MODE	(2)
5	DETECTION FILTER	(1)



TO RESET TO FACTORY VALUES, press and hold **both** push buttons until both LEDs flash.

ACCESS CODE

The access code (1 to 4 digits) is recommended to set sensors installed close to each other.

SAVING AN ACCESS CODE:



DELETING AN ACCESS CODE:



Once you have saved an access code, you always need to enter this code to unlock the sensor.

If you do not know the access code, **cut and restore the power supply**. During 1 minute, you can access the sensor without introducing any access code.

TROUBLESHOOTING

 The door remains closed. The LED is OFF.	The sensor power is off.	<ol style="list-style-type: none"> 1 Check the wiring and the power supply.
 The door does not react as expected.	Improper output configuration on the sensor.	<ol style="list-style-type: none"> 1 Check the output configuration setting on each sensor connected to the door operator.
 The door opens and closes constantly.	The sensor is disturbed by the door motion or vibrations caused by the door motion.	<ol style="list-style-type: none"> 1 Make sure the sensor is fixed properly. 2 Make sure the detection mode is unidirectional. 3 Increase the tilt angle. 4 Increase the detection filter value. 5 Reduce the field size.
 The door opens for no apparent reason.	The sensor detects raindrops or vibrations. In highly reflective environments, the sensor detects objects outside of its detection field.	<ol style="list-style-type: none"> 1 Make sure the detection mode is unidirectional. 2 Increase the detection filter value. 1 Change the antenna angle. 2 Decrease the field size. 3 Increase the detection filter value.
 The vehicle detection filter is used, but pedestrians are still detected.	The chosen value is not optimal for this application.	<ol style="list-style-type: none"> 1 Increase the detection filter value. 2 Decrease the sensor angle. 3 Increase the installation height. 4 Make sure the detection mode is unidirectional.
 The LED flashes quickly after unlocking.	The sensor needs an access code to unlock.	<ol style="list-style-type: none"> 1 Enter the right access code. 2 If you do not know the access code, cut the power supply and restore it to access the sensor and change the access code or delete it.
The sensor does not respond to the remote control.	The remote control batteries are weak or improperly installed.	<ol style="list-style-type: none"> 1 Check the batteries and change them if necessary.

